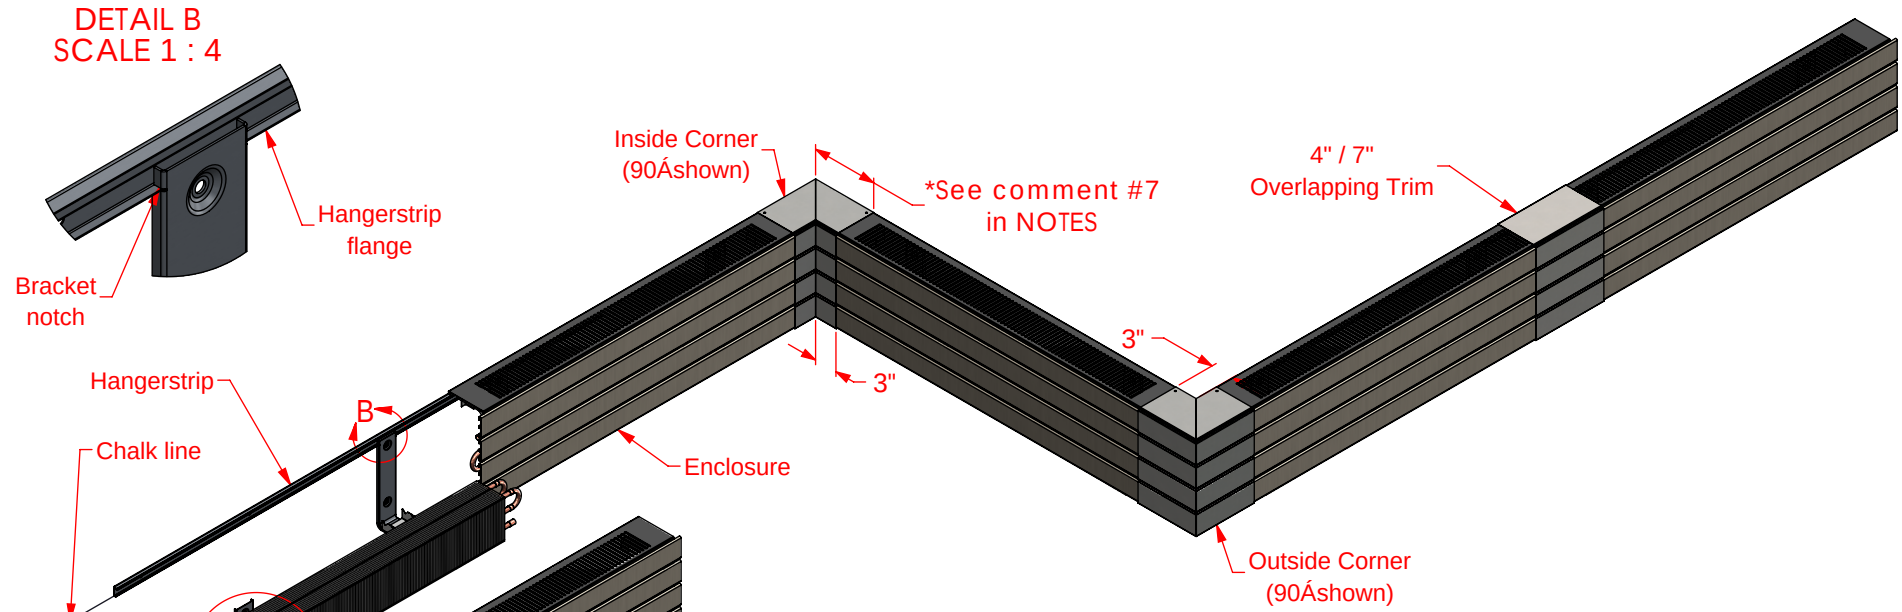

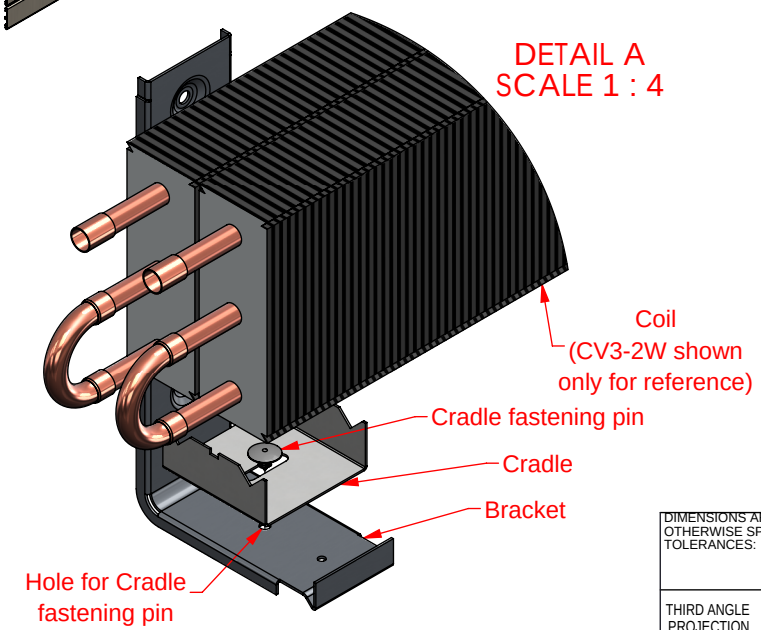

NOTES:

1 - Install Hangerstrip to wall (fasteners by others). Optional:Snap chalk line onto wall to ensure Hangerstrip is straight & level.
2 - Hang Brackets onto Hangerstrip flange using notches in brackets, use (1) Bracket every 2 - 3 feet, fasten to wall (fasteners by others).
3 - Install Cradles to Brackets using the Cradle Fastening Pin.
4 - Install Coils by placing onto cradles, ensuring Coils sit completely down onto Cradles. After all Coils are in place, make plumbing connections to Coils.
5 - Install Enclosure. Hook top of Panel onto Hangerstrip, swing downwards and snap bottom of Panel onto Brackets.
6 - Install overlapping accessories (End Caps, Trims & Corners) by fitting over Enclosure. Corners are fastened to Enclosure through holes on top (fasteners by others).
7 - Corner dimension is as follows:
Model 3.3 = 6-5/16"
Model 4.0 = 7"
Model 5.6 = 8-9/16"

Sigma Corporation
3325A Orlando Drive Mississauga, Ont. L4V 1C5.
Canada Tel: (905) 670-3200 Fax: (905) 670-3822

TITLE: Layout
Description: IOM for SRK-W Enclosure
COMMENTS:

Drawn by: RL Date: 1/13/2017
Checked by: RL Date: 1/13/2017
Approved: RL Date: 1/13/2017

DIMENSIONS ARE IN INCHES UNLESS OTHERWISE SPECIFIED
TOLERANCES: FRACTIONAL ± 1/32"
ANGULAR: ± 0.5Á
2 PLACE DECIMAL: ±0.01
3 PLACE DECIMAL: ±0.005

THIRD ANGLE PROJECTION

DO NOT SCALE DRAWING

SIZE A
DWG. NO. IOM-SRK-A.0-W-5.6-01
SHT SCALE: 1:20
SHEET 1 OF 1

This drawing is the property of SIGMA Convectors Enclosures Corp. and shall not be reproducedin any form without the written consent of SIGMA